 





ROYAL SAVOY

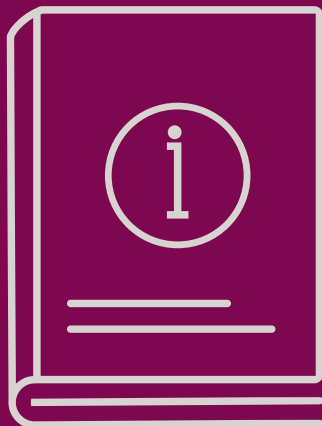

User Manual

Air Conditioning

 JOHNSON CONTROLS TM-9100

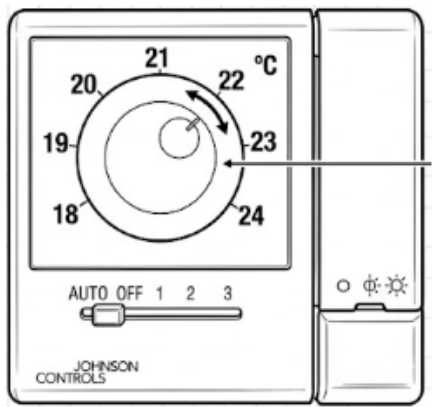

Thermostat – Front Panel

- 1. **Speed (lower sliding button):** Move the horizontal slider to select the mode – see table below.
- 2. **Temperature (central knob):** Turn left = cool / Turn right = heat.
- 3. **System in energy-saving mode?** If the air conditioning is not working, press the button in the bottom right corner once to reactivate the system.


Position	Description
OFF	System off
1	Low speed – Gentle, quiet airflow
2	Medium speed – Balance between comfort and efficiency
3	High speed – Cools/heats the space faster
A	Automatic – The system regulates the speed automatically – Recommended

How to confirm the system is active: The light remains red when the air conditioning is running.

Golden rule: The system only works when the room window is fully closed. If it does not respond, check the window first.

Microwave & Extractor Hood

WHIRLPOOL AVM 955 IX

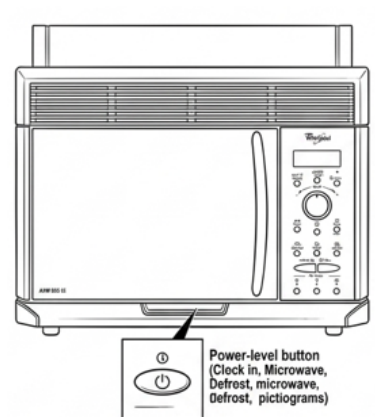

Control Panel + Extractor Hood Flap

- 1. Extractor hood:** Pull the front flap outwards to activate. The buttons on the flap control the fan speed. Push it in to switch it off.
- 2. Quick Heat:** Press Start. Each tap adds 30 seconds at full power.


Microwave Functions

- **Timer:** Set minutes and seconds manually using the number buttons, then press Start.
- **Power Level:** Press Power to select % (100%, 70%, 50%, 30%) before starting.
- **Defrost:** Press Defrost, enter weight in grams, then press Start.
- **Stop/Cancel:** One tap pauses the appliance. Press Stop twice to cancel completely.

Safety: Never place metal objects or aluminium foil inside the microwave.

Ceramic Hob

MEIRELES MV1601 & MV1312

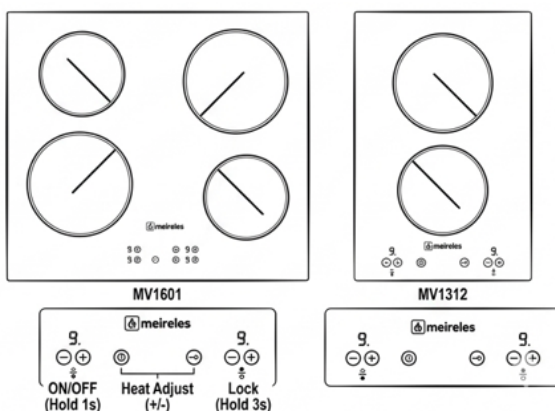

Touch Panel – On/Off and +/- Buttons

MV1601 – Touch Panel

- Touch and hold On/Off for 1 second to switch the hob on or off.
- Use the + and - buttons to set the heat level from 1 to 9.
- **Lock:** Press the padlock/key symbol for 3 seconds – the display shows 'Lo'.
- **Unlock:** The hob displays 'Lo' and does not respond? Press the padlock/key symbol again for 3 seconds until 'Lo' disappears.

MV1312 – Touch Panel


- Touch and hold On/Off for 1 second to switch the hob on or off.
- Adjust the heat level with the + and - buttons.
- **Lock:** Press + and - simultaneously for 3 seconds – the display shows 'Lo'.
- **Unlock:** The hob displays 'Lo' and does not respond? Press + and - simultaneously again for 3 seconds until 'Lo' disappears.

Before leaving: Do not leave the apartment with objects on the hob. Residual heat may damage your belongings or activate the hob's safety features.

Electronic Safe


4 models available. First, identify your model in the images below, then follow the corresponding instructions.

MODEL 1: YALE YLG/200/DB1

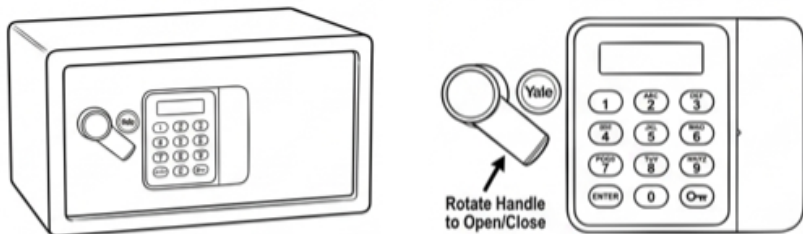


- **Lock:** Close the door – Enter between 3 and 8 digits – Press LOCK.
- **Open:** Enter the same code – Press LOCK – Pull the door open.
- 4 incorrect attempts will lock the safe for 3 minutes.

MODEL 2: DOMETIC MD361 / MD363

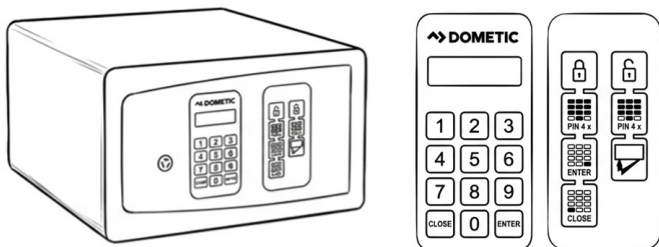


- **Lock:** Close the door – Enter 4 digits – Press CLOSE.
- **Open:** Enter the same code – Press CLOSE – Pull the door open.
- 5 incorrect attempts will activate a 6-minute lockout – the display will show ERROR5.

MODEL 3: ASSA ABLOY ZENITH WIDE

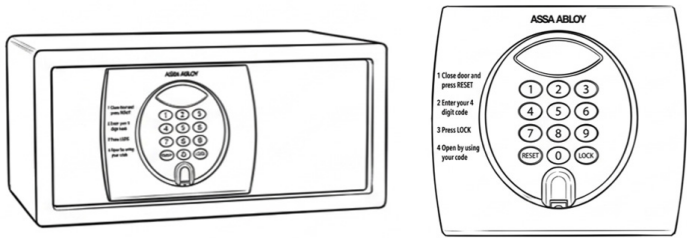

- **Lock:** Close the door – Enter 4 digits – Press LOCK.
- **Open:** Enter the same code – the door opens automatically via a spring mechanism.


MODEL 4: CISA

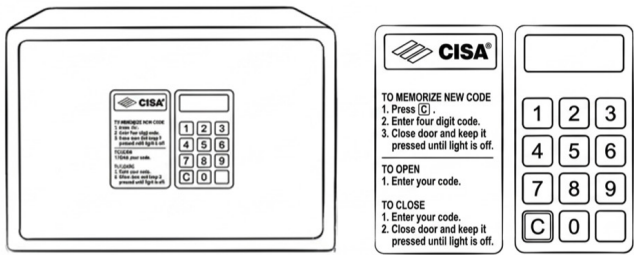

- **Lock:** Press 'C' – Enter 4 digits – Close the door and hold it closed until the light goes off.
- **Open:** Press 'C' – Enter 4 digits – Enter the same code – The indicator lights come on – Pull the door open.
- **To memorise a new code:** Press 'C' – Enter a four-digit code – Close door and hold it closed until the light goes off.

Minibar

TRISTAR KN-7351

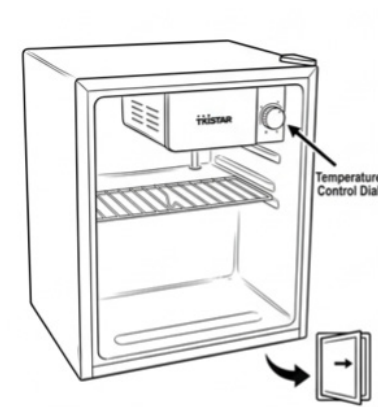

Temperature Dial + Drip Tray

- 1. Temperature:** Turn the dial inside. Higher numbers = colder. For normal use, position 3 or 4 is sufficient.
- 2. Freezer compartment (top section, 5 L):** Ideal for ice, frozen products or drinks you want to cool quickly.
- 3. Drip tray:** Do not remove the drip tray at the base of the minibar. Removing it may cause water to spill onto the floor.

Please note: Do not place hot food directly in the minibar – allow it to cool first. Hot food increases energy consumption and may damage the appliance.

Lighting & Technology

USAGE TIPS

1. **Lamps:** If the floor lamp does not turn on using its own switch, also turn on the wall switch.
2. **Streaming (Firestick, etc.):** Please provide the device's MAC address to Reception for Wi-Fi network registration.
The MAC address can be found under Settings > Network > About Device.

Need help?

Contact Reception, available 24 hours a day — **Ext.: 9**

